

COCOTEX

FOR



VIDEOTEX TERMINAL EMULATOR

BY:

RON WRIGHT © 1985

FOR:

RADIO SHACK COLOUR COMPUTER
TAPE OR DISK
16K, 32K or 64K MODELS

VIATEL IS THE NEW INTERACTIVE INFORMATION SERVICE FROM TELECOM AUSTRALIA.

THIS VIDEOTEX SERVICE OPERATES OVER EXISTING TELEPHONE LINES AT 1200/75 BAUD.

VIATEL IS PROVIDED NATIONALLY AT A UNIFORM CHARGE.

----- IMPORTANT -----

Hundreds of hours of work has been involved in creating COCOTEX. If you have purchased this program you will be supporting the development of future versions with more features. These new versions will be available to you at a minimal update cost. To allow us to support you please return your REGISTRATION form as soon as possible with any suggestions for improvements to COCOTEX and this documentation.

100049

COCOTEX SERIAL NUMBER

WARRANTY INFORMATION

Great care was taken to ensure that this program operates as advertised, but we will not be held responsible for damages incidental to its use in a users system.

CONTENTS

	page
Contents.....	1
Introduction.....	2
Features.....	2
Cocotex configuration program.....	3
Display selection option.....	4
Programming auto ID mode.....	4
Selecting modem type.....	5
Auto dial setup for Smartmodem.....	5
Cocotex Tape or Disk save selection.....	6
Repeating configuration or exiting to basic.....	7
Coco to Modem connections.....	8
Coco to Smartmodem connections.....	9
Loading COCOTEX.....	10
How to connect to VIATEL.....	11
VIATEL hints and tips.....	12
Special keyboard functions.....	13
Cursor control keys.....	14
Cocotex Limitations.....	15

INTRODUCTION:

COCOTEX is a Colour Computer (COCO) software package which will bring the new and exciting world of VIDEOTEX into your home. When used in conjunction with a 1200/75 BAUD Modem this package will turn your COCO into a powerful, easy to use terminal.

```
-----
:           :           :           :           :
:  COCO     :  RS232   :  1200/75 :           :
:  plus     :  -----:  baud    :  -----: Telephone :
:  COCOTEX  :  cable   :  Modem   :           :
:           :           :           :           :
-----
```

FEATURES:

- 1: 40 character 24 line display.
- 2: UPPER and lower case display.
- 3: Full support of graphics characters.
(Black and White only)
- 4: Contiguous and Separated Mosaics supported.
- 5: Full cursor control support.
- 6: Auto ID send facilities.
- 7: Single and Double height characters supported.
- 8: Flashing character supported.
- 9: Conceal and Reveal mode supported.
- 10: Hold and Release Mosaics supported.
- 11: Page store and recall facility.
- 12: Uses built in RS232 port.
- 13: Even parity error checking supported.
- 14: Single key controls supported.
- 15: Support for SMARTMODEM with auto dialing.

COCOTEX configuration:

COCOTEX is supplied on a tape in the form of a configuration program. To LOAD this program you will need to use the following basic command.

CLOADM "CONFIG"

When the configuration program has finished loading the menu below should appear on the screen.

```
*****  
*                                     *  
*           COCOTEX                   *  
*                                     *  
*   CONFIGURATION PROGRAM             *  
*                                     *  
*   BY: RON WRIGHT (C) 1985          *  
*                                     *  
*****
```

PLEASE HIT A KEY TO START

The purpose of the configuration program is to allow you to produce a customized version of COCOTEX. You have the option of saving this configured version on DISK or TAPE.

```
*****  
NOTE: YOU WILL REQUIRE A BLANK TAPE OR A FORMATTED DISK  
      TO SAVE THE THE CONFIGURED VERSION OF COCOTEX.  
*****
```

Display selection option:

This option will allow you to select the type of display COCOTEX will use. The normal display will give you a white screen with black characters.

```
*****  
*                                     *  
*          SELECT DISPLAY TYPE        *  
*                                     *  
*****
```

1 = NORMAL DISPLAY.
2 = INVERTED DISPLAY.

PLEASE SELECT 1 OR 2

Auto ID setup:

Cocotex supports the automatic sending of your users ID code. This code is a 10 digit number in the case of VIATEL, the menu below will appear and allow you to enter your ID.

```
*****  
*                                     *  
*          AUTO ID MODE SETUP        *  
*                                     *  
*          -----                    *  
*                                     *  
*****
```

PLEASE ENTER ID
USE <ENTER> TO EXIT ID SETUP

Selecting Modem type:

This function will allow you to select the type of modem you would like to use. The normal modem is one that has a 1200/75 baud option. The Smartmodem has a speed conversion function which requires COCOTEX to be setup for 1200 baud in both directions.

```
*****  
*                                     *  
*           SELECT MODEM TYPE       *  
*                                     *  
*****
```

- 1 = NORMAL 1200/75 BAUD.
- 2 = SMART MODEM 1200/1200.

PLEASE SELECT 1 OR 2

Auto Dial setup for Smartmodem:

For Smartmodems that support the HAYES protocol this function will setup the auto dial data. The number to use in the case of VIATEL is 01955.

```
*****  
*                                     *  
*           AUTO DIAL MODE SETUP     *  
*                                     *  
*           -----                  *  
*                                     *  
*****
```

PLEASE ENTER TELEPHONE NUMBER

- USE A COMMA TO ADD A PAUSE
- USE <ENTER> TO EXIT SETUP.

Selecting program name:

This feature will allow you to name your configured version of COCOTEX so its name can reflect the way it has been configured.

```
*****  
*                                     *  
*      PROGRAM NAME SETUP            *  
*                                     *  
*      -----                       *  
*                                     *  
*****
```

PLEASE ENTER PROGRAM NAME
USE <ENTER> TO EXIT SETUP

Saving configured COCOTEX:

Now you have configured your version of COCOTEX you can now save this version on a TAPE or DISK.

```
*****  
*                                     *  
*      TAPE OR DISK SAVE             *  
*                                     *  
*****
```

1 = SAVE COCOTEX TO TAPE.
2 = SAVE COCOTEX TO DISK.

PLEASE SELECT 1 OR 2

You will receive several prompt messages to guide you through the saving process.

After the configured version of COCOTEX has been saved the following menu will be displayed. You now have an option of configuring another version or returning to basic.

```
*****
*                                     *
*   CONFIGURE ANOTHER VERSION   *
*                                     *
*           OR EXIT TO BASIC.           *
*                                     *
*****
```

```
1 = CONFIGURE ANOTHER VERSION.
2 = **** EXIT TO BASIC ****
```

PLEASE SELECT 1 OR 2

Before control is returned to basic this exit message will be displayed.

```
*****
*                                     *
*   THANK YOU FOR PURCHASING   *
*           COCOTEX           *
*   YOU ARE NOW READY TO ENTER *
*           THE EXCITING WORLD *
*           VIDEOTEX           *
*                                     *
*   BY: RON WRIGHT (C) 1985   *
*                                     *
*****
```

PLEASE HIT A KEY TO EXIT

COCO TO MODEM CONNECTION:

Due to the limited implementation of an RS232 serial communications port on the COCO it was not possible to implement handshaking. This means that your Modem must be configured to operate with data leads only. Below is the typical interconnection as a guide. But please consult your Modem handbook because every modem is slightly different.

INTERCONNECTIONS REQUIRED:

1. COCO RS232 data input.....pins 1 and 2
to Modem data output.....pin 3
2. COCO RS232 data output.....pin 4
to Modem backward channel input.....pin 14
3. COCO RS232 common.....pin 3
to Modem ground.....pin 7

COCO RS232	MODEM
pin 1 o-----o	pin 3
and 2 o	
pin 4 o-----o	pin 14
pin 3 o-----o	pin 7
	see note -o pin 4
	see note -o pin 6
	o and 11

NOTES:

The forward channel must be disabled by pulling RTS pin 4 on modem D25 low by connecting it to pin 7.

The 75 baud modem backward channel must be enabled by pulling BRTS pin 11 on modem D25 high by connecting it to CTS pin 6 with a 10k resistor.

Pin 1 & 2 of the COCO RS232 port are connected together to form an interrupt driven input.

Coco to Smartmodem connections:

As the Smartmodem does a speed conversion the need to connect to the backward channel is not required. COCOTEX will send out data at 1200 baud using the forward channel and let the modem convert the speed.

Interconnection required:

COCO RS232	SMARTMODEM
pin 1 o-----o	pin 3
and 2 o	
pin 4 o-----o	pin 2
pin 3 o-----o	pin 7
	see note --o pin 4
	o and 5
	see note --o pin 6
	o and 20

NOTES:

RTS and CTS must be connected together and DSR and DTR must be connected to together to setup the correct modem handshacking.

LOADING COCOTEX:

This machine code program has been designed to run on the 16K, 32K or 64K models of the COCO. When COCOTEX is used on the 16K model only a one storage page is available compared to ten on the other models.

To load COCOTEX from tape use.....LOADM "FILENAME"
from disk use.....LOADM "FILENAME"

Both the disk and tape versions of COCOTEX will start running automatically once loaded. A face page using a hires graphics screen should appear. The face page of COCOTEX contains a number of important pieces of information.

VERSION NUMBER:

The version number of your COCOTEX program will be displayed on this page it will be worth noting which version you have for updating purposes.

CONFIGURATION:

The lower part of the screen will display a section headed CONFIGURATION. This area should reflect the way you have configured COCOTEX so please spend a few moments to check to see if it is correct.

ONLINE CONNECTION PROMPT:

At the bottom of the page will be displayed a prompt message requesting the <ENTER> key be pressed. Doing this will place COCOTEX online ready to display incoming data from the modem.

HOW TO CONNECT TO VIATEL:

1. Equipment required for setup.
 - a. Connect the RS232 output of your COCO to your Modem using our "COCO to modem connection guide".
 - b. Plug your modem into the phone socket.
 - c. Place your modem offline and configure it for 1200/75 baud operation.
2. Load your COCOTEX program.
 - a. Once loaded COCOTEX will display a prompt message requesting connection. To place COCOTEX online you must press the <ENTER> key.
 - b. If you have a "SMARTMODEM" with an auto dial feature an auto dial request will be issued. A flashing online waiting message will then appear.
3. Connection with a SMARTMODEM.

If you have a SMARTMODEM with an auto dial feature just sit back and wait for the connection to be made. If the connection fails, try again, by placing your terminal offline then online.

4. Connection using a normal MODEM.

With your modem in the offline position, lift up the phone and dial VIATEL on 01955. When you receive a modem tone, place your modem ONLINE.

5. Completing the VIATEL connection.

When your connection is made a COM message should appear at the top of the screen followed by several prompting messages.

- a. A request for your ten digit ID number would normally be received, but because of the auto ID sending feature of COCOTEX, only part of this message will appear.
- b. You will then receive a request for your four character password. Once your password has been entered and excepted you will receive a WELCOME message from VIATEL.

**** YOU ARE NOW READY TO EXPLORE VIATEL ****

VIATEL HINTS AND TIPS

1. Special Keys.

The main keys that you will be using to access information on VIATEL will be the numbers 0-9 and the control keys * and #. To make these keys easier to access the arrow keys have been redefined.

LEFT arrow = * RIGHT arrow = #

2. Gone the wrong way.

If you find yourself entering an area of the database you didn't want to access you can use *# to backup or *0# to exit back to the main menu.

3. Finding your way again.

With the large amount of information on VIATEL, you will find yourself discovering new information that interests you. To save you the time and effort in the future make a note of all your most commonly used page numbers.

4. Commonly used page numbers.

VIATELS main index	*0#
Correcting typing errors.....	**
Whats NEW.....	*123#
Alphabetical Subject index.....	*13#
Redisplay the current page.....	*00
Return to previous page, limited to 3.....	*#
Ace Videotex Games.....	*414#
Svs Games.....	*5001#
Sending greeting cards.....	*1003#
Sending a message to VIATEL.....	*1052#
Mailbox message sending.....	*103#
Checking your current VIATEL bill.....	*92#
Exit VIATEL and check for new mail.....	*90#

SPECIAL KEYBOARD FUNCTIONS:

To make the COCO easier to use as a VIDEOTEX terminal several keys have been redefined.

```
-----
:           : LEFT ARROW becomes an *
:   *       : character used to select a new page.
:           :
-----

:           : RIGHT ARROW becomes an #
:   #       : character used to terminate request.
:           :
-----

:           : CLEAR becomes the REVEAL key
: REVEAL    : control key reveals CONCEALED lines.
:           :
-----

:           : BREAK becomes an ESC
:   ESC     : character used for display control.
:           :
-----

:           : SHIFT BREAK
: ON/OFF    : ON/OFF LINE Toggle.
:           :
-----

:           : UP ARROW becomes STORE
: STORE     : used to store the displayed page.
:           :
-----

:           : DOWN ARROW becomes RECALL
: RECALL    : used to recall stored pages.
:           : The program prompts for page number 0-9
-----
```

SPECIAL KEYBOARD FUNCTIONS CONTINUED:

```
-----  
:           :      SHIFT ZERO  
:   CAPS   :      used to select / release caps lock.  
:           :  
-----
```

CURSOR CONTROL KEYS:

```
-----  
!  SHIFT  !  
!   UP    !      CURSOR UP CHARACTER.  
!  ARROW  !  
-----
```

```
-----  
:  SHIFT  :  
:  DOWN   :      CURSOR DOWN CHARACTER.  
:  ARROW  :  
-----
```

```
-----  
:  SHIFT  :  
:  LEFT   :      CURSOR LEFT CHARACTER.  
:  ARROW  :  
-----
```

```
-----  
:  SHIFT  :  
:  RIGHT  :      CURSOR RIGHT CHARACTER.  
:  ARROW  :  
-----
```

```
-----  
:  SHIFT  :  
:  CLEAR  :      CLEAR SCREEN CHARACTER.  
:         :  
-----
```

```
-----  
:  SHIFT  :  
:   @    :      CURSOR HOME CHARACTER.  
:         :  
-----
```


COCOTEX LIMITATIONS:

Due to the hardware limitations of the COCO it has been difficult to achieve a totally interactive terminal. This is due to the high software overheads involved in inputting and outputting characters. The current version of COCOTEX has a slow keyboard response which can cause characters to be lost if data is entered to quickly.

SUPPORTING YOU IN THE FUTURE

I hope this version of COCOTEX will serve you well, I will be looking forward to hearing from you with your comments. There are so many things that I would like to see in future versions such as Disk and Tape save, Printer dumps and Down load software support, any suggestions will be welcomed.

HAVE FUN

DISCOVERING THE NEW INFORMATION REVOLUTION.

